




INSTALLATION INSTRUCTIONS

IGNITE FLUSH MOUNT BACK UP LIGHT KIT

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems. Professional installation is recommended. Note: location should be a flat vertical surface on the rear of the vehicle.

1. Use 1.75" diameter hole saw for main hole. Place light into hole and mark locations for mount screws. Use 3/16" drill bit for mount screw holes.
2. Install lights using provided hardware.
3. Wiring: Route cables behind bumper, trim excess, connect to factory reverse light wires. Take care to avoid any heat sources & sharp or abrasive surfaces.
4. Reconnect power source, place your vehicle in reverse and ensure lights turn on.

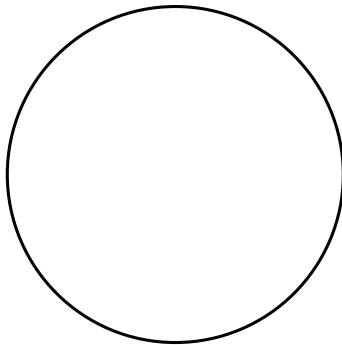

Use This Template For
Accuracy When Using Hole Saw

WARRANTY INFORMATION

For warranty information, visit www.rigidindustries.com/about/warranty
779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337

www.rigidindustries.com

Ignite, and Rigid Industries are registered and/or common law marks owned by JST Performance, LLC, a Delaware limited liability company d/b/a Rigid Industries.